


# Smart Lock

## User Manual

HL-SDL01

[www.thehonorlink.com](http://www.thehonorlink.com)

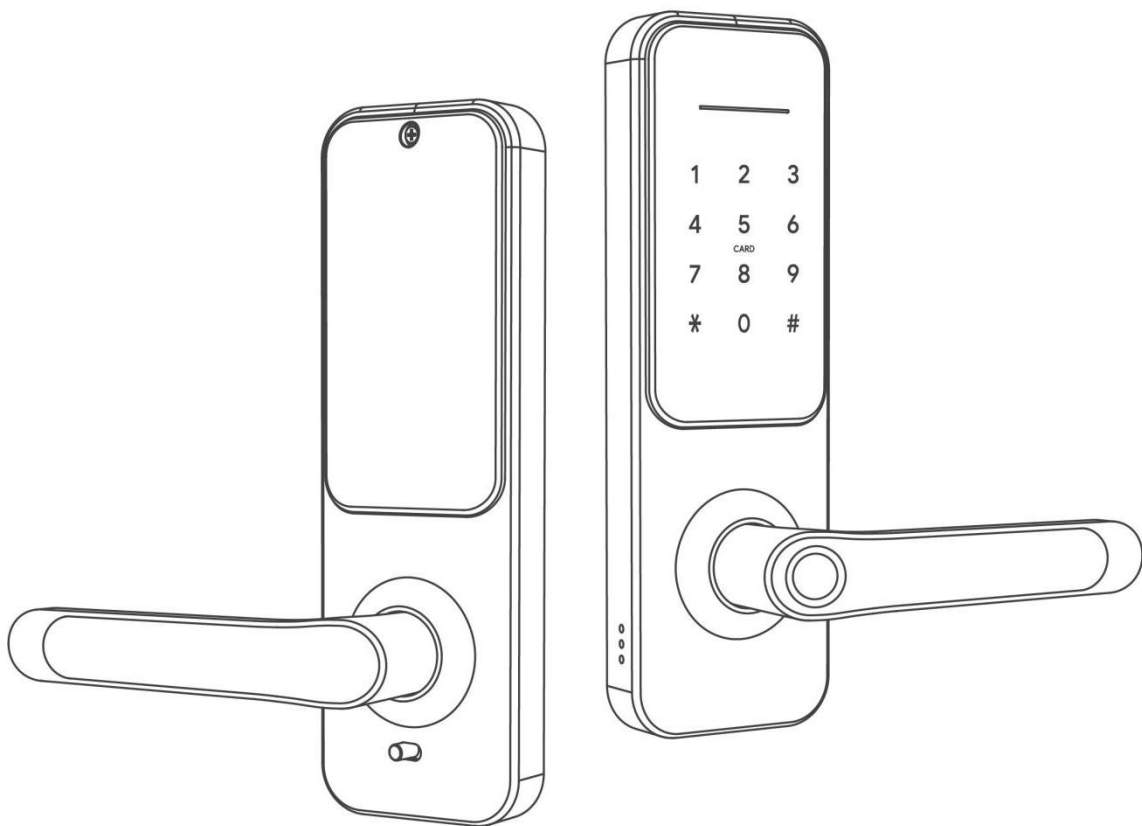


### Special Attention:

1. Mechanical keys please keep outdoor, just in case keys lock in doors.
2. Please replace for the battery when low wattage alarm.
3. Reading this manual carefully before installation, and keep it for future reference.

# 1. Introduction

## 1.1.Lock structure

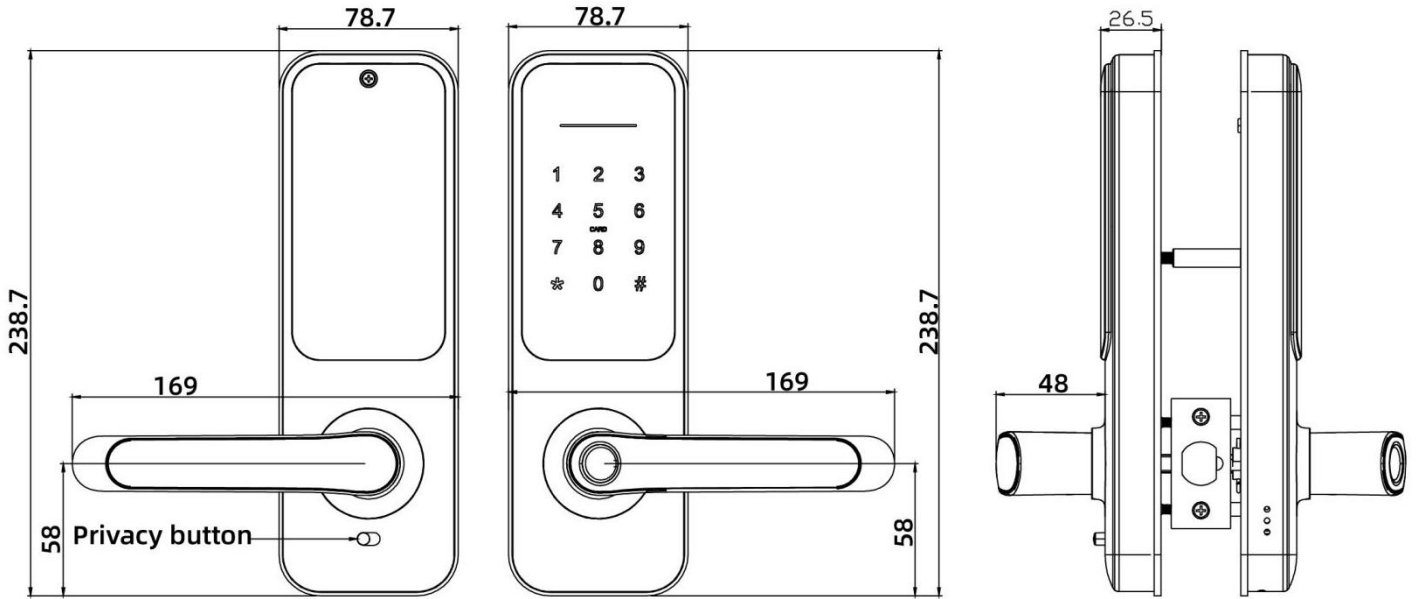

## 1.2.Packing List

💡 Check the following drawing to check whether the package contains all the parts

| NO | Name                       | Qty | NO. | Name  | Qty |
|----|----------------------------|-----|-----|---|-----|
| 1  | Front Panel                | 1   | 11  | Mortise Screws:M4*20mm<br>(For Wooden Door)   | 5   |
| 2  | Back Panel                 | 1   | 12  | Mortise Screws:M5*10mm<br>(For Aluminum Door) | 4   |
| 3  | Mortise                    | 1   | 13  | 60mm Square shaft                             | 1   |
| 4  | Card                       | 3   | 14  | 80mm Square shaft                             | 1   |
| 5  | Mechanical Key             | 2   | 15  | M5*25mm Screw                                 | 3   |
| 6  | Waterproof Rubber<br>Plate | 2   | 16  | M5*30mm Screw                                 | 3   |
| 7  | Screw Stubs:M4*30mm        | 3   | 17  | M5*40mm Screw                                 | 3   |
| 8  | Screw Stubs:M4*35mm        | 3   | 18  | U-Clip  | 1   |
| 9  | Strike&Strike Box          | 1+1 | 19  | M4*8mm Panel screws                           | 3   |
| 10 | User Manual                | 1   |     |   |     |

### 1.3.Specifications

|                     |   |                       |  |
|---------------------|---|-----------------------|--|
| Suitable for Models | HL-SDL01  | Doors Applicable      | Aluminum door<br>Wooden door                           |
| Materials           | Panel: Stainless steel<br>Handle: Aluminum alloy                  | Working Voltage       | 6V/4x AA Batteries                                     |
| Lock Weight         | 2.5 KG  | Door Thickness to Fit | 35-60mm  |
| Unlocking Way       | WIFI<br>Fingerprint(option)<br>Password<br>Card<br>Mechanical key | Data Capacity         | Fingerprint+Password+Card<br>≤180<br>(Fingerprint≤100) |
| Color               | Silver<br>Black   | Working Temperature   | -10°C-55°C   |
| Low Wattage Alarm   | Less than 4.8V  | Working Humidity      | 0-95%  |

### 1.4.Electronic Locking Button



Locked



Unlock

When the button is pulled to the "red" status, the lock is set to the "Locked" state. In this state, the lock can only be opened from the outside by using the Master Admin access method. Any other unlock methods will trigger a voice prompt saying "the lock is locked" when attempting to unlock.


To disable this function and release the "Locked" state, you need to pull the button to the "green" status. This action will allow the lock to be unlocked using other authorized methods without triggering the voice prompt.

## 2.Installation


### 2.1Turn the handle

**Notice:** Adjust the handle according to the direction you open the door.


For Front Panel:

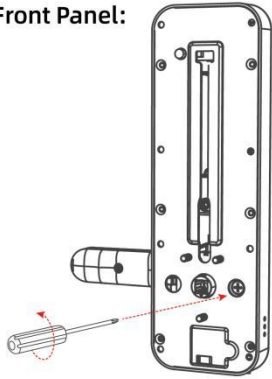

1. Loosen the screws

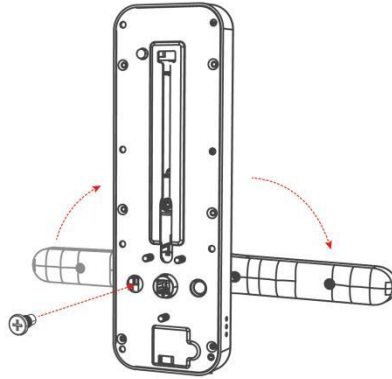


2.Left Open the Handle Toword the Left;  
Right Open the Handle Toword the Right.

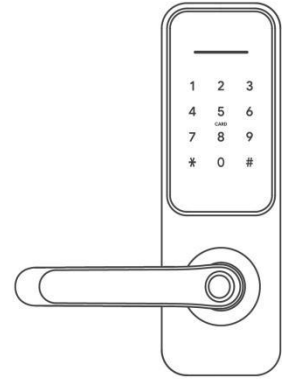


3.Reinstall the Screw After  
Adjusting the DIRECTION


For Back Panel:

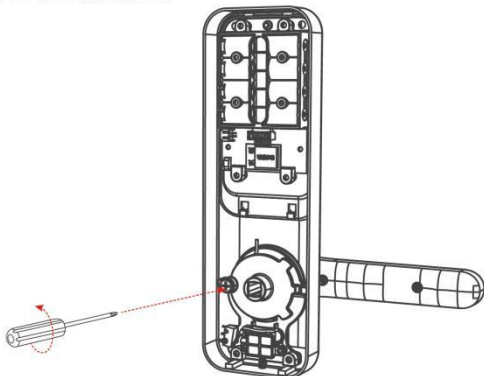

1. Loosen the screws






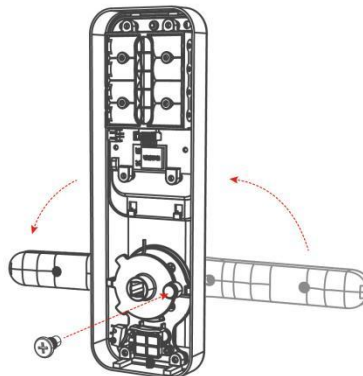


2.Left Open the Handle Toword the Right ;  
Right Open the Handle Toword the Left.

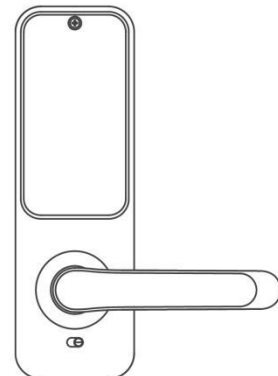

3.Reinstall the Screw After  
Adjusting the DIRECTION


## 2.2. Installation Diagram(For Latch )
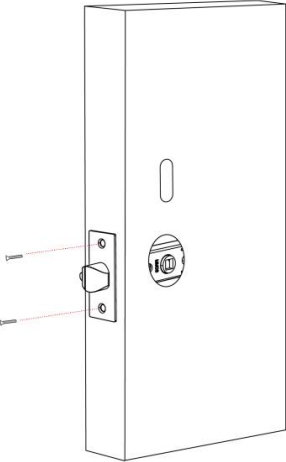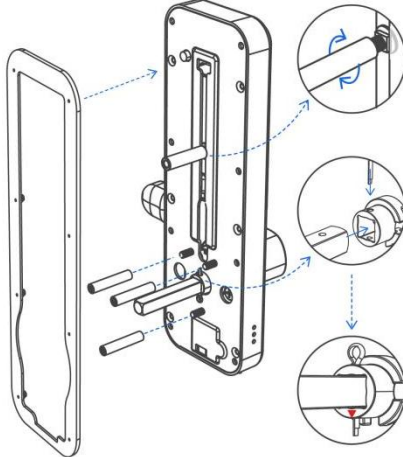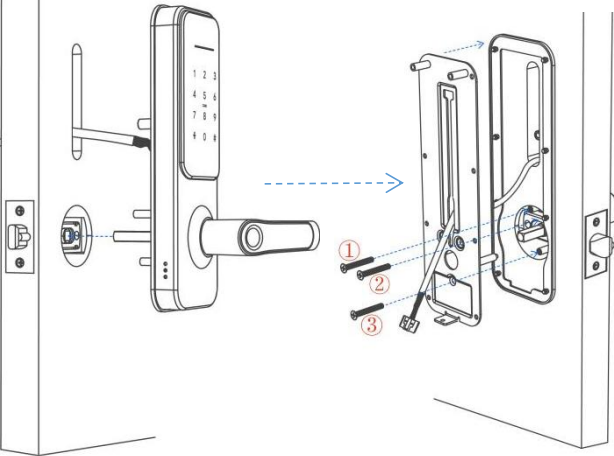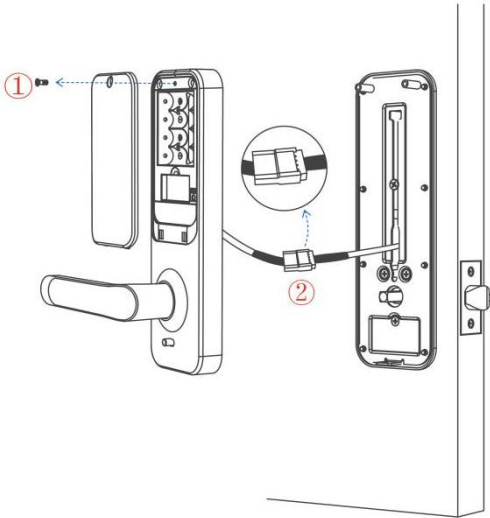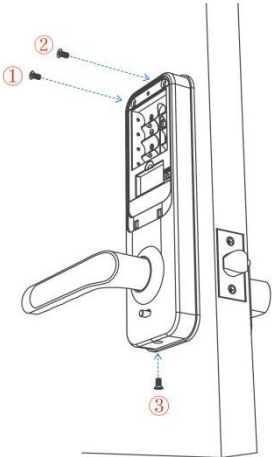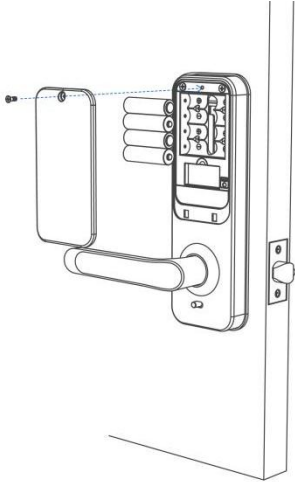
|   |  |
|---|--|
| <p><b>Step 1 Install Mortise</b></p>                   | <p><b>Step 2 Install Sliding Screw Casing</b></p>  <p>The screw casing place is adjustable Depending on the location of the hole-drilling or the old door hole. Or you could leave it out</p> <p>Insert the U-clip into the hole and bend it's front end to fix the square shaft</p> |
| <p><b>Step 3 Install back gasket</b></p>              | <p><b>Step 4 Install Back Panel and link wire</b></p>   |
| <p><b>Step 5 Install battery and back cover</b></p>  | <p><b>Step 6 installation complete</b></p>   |

# 3.Operation

## 3.1.Number Pad


"\*" : Cancel, Return,  
Exit and Delete  
"# " : Confirm and End

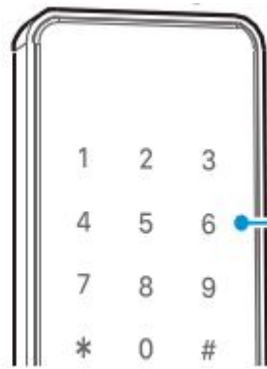


1#: set  
2#:EZ mode  
4#: Request remote unlock picking  
5#: Get a temporary password  
6#: Time Updating

Passage mode: After verifying unlocking, press and hold "0" for 3 seconds and then prompt "the door is passage mode"

## 3.2.1.Setting Guide

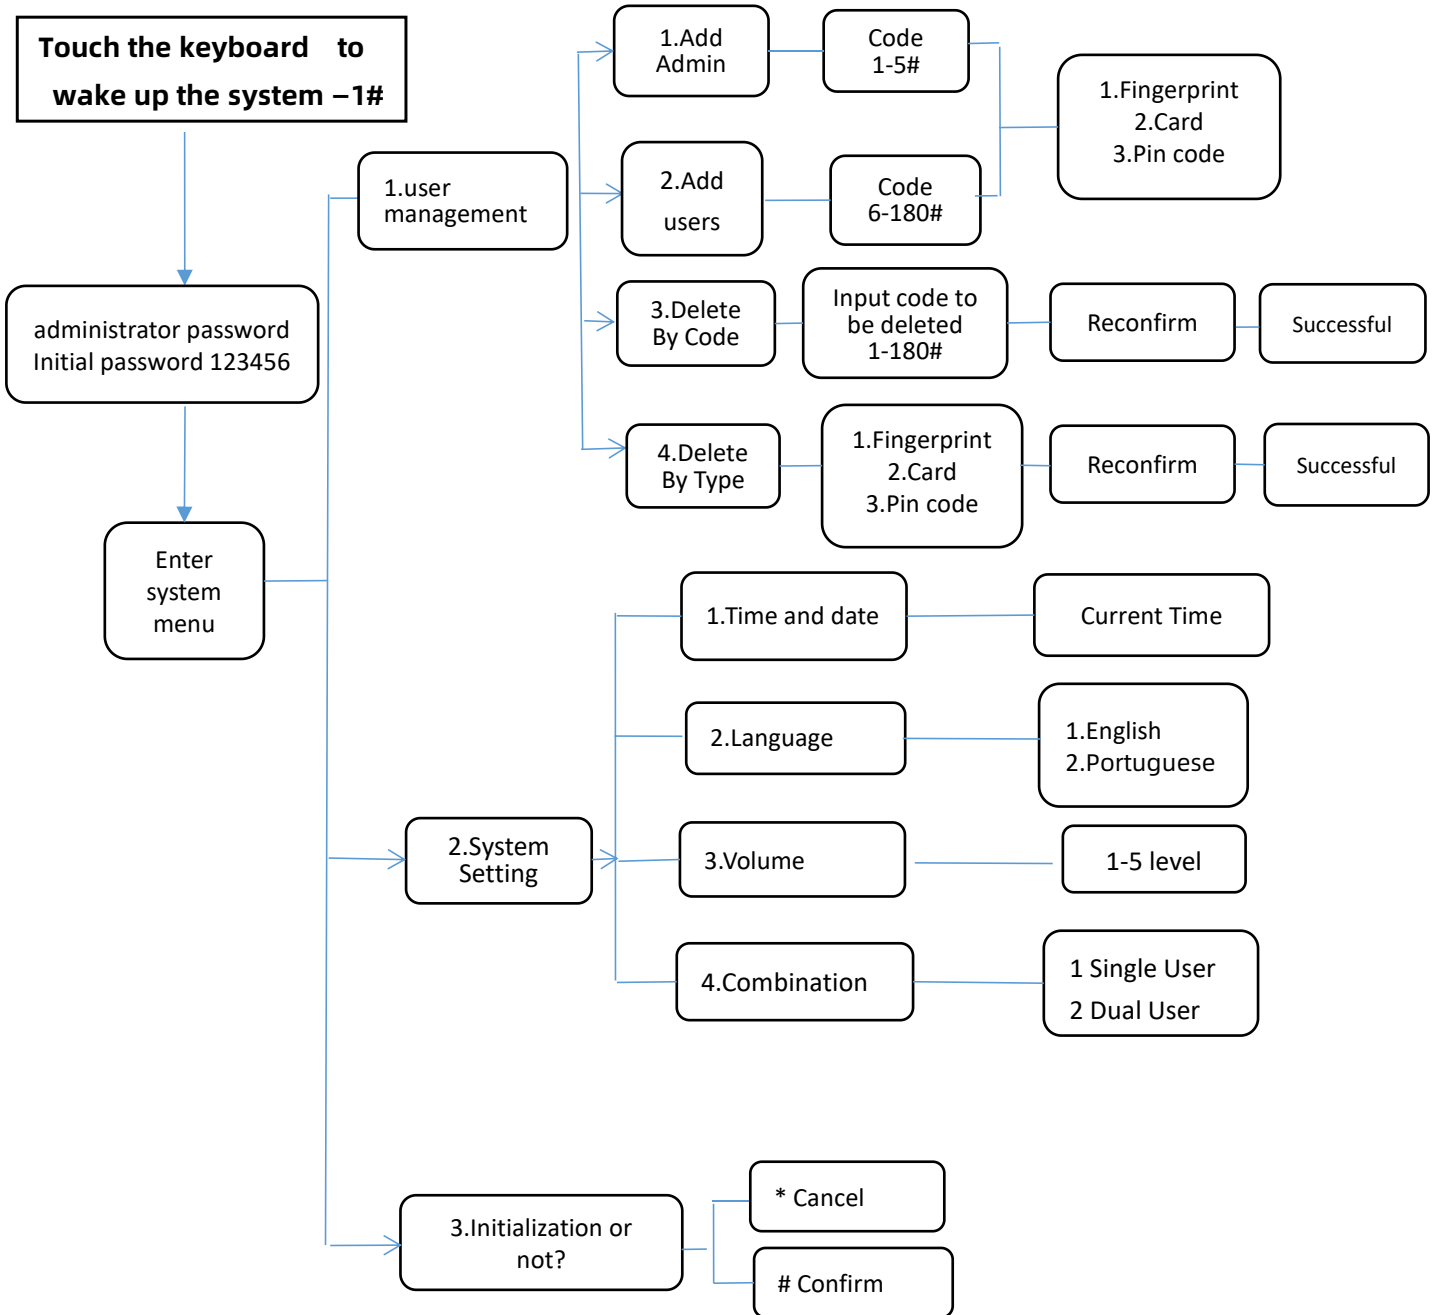

### 3.2.2. Initialization Mode

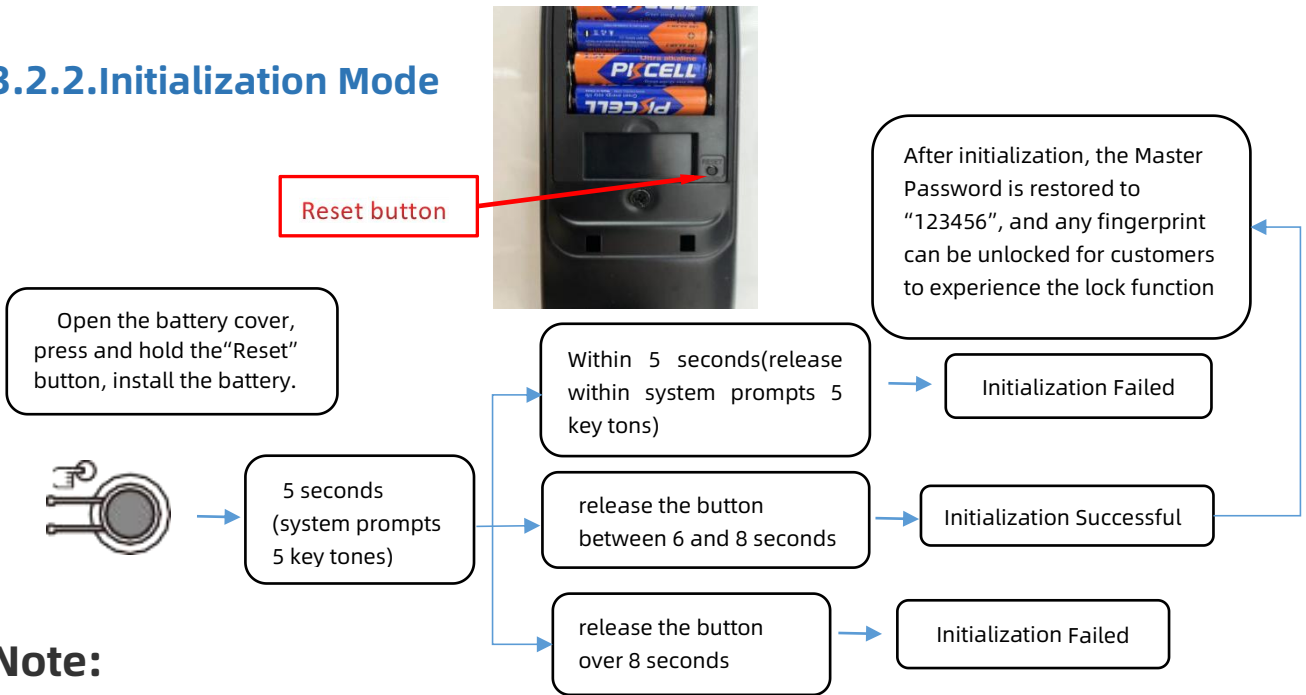

**Note:**

%K \Yb i gbl hY"8 YH Vm mY Z bWjcbzd Ygy bch h Uih Wbch XY h Ya UbU Ya Ybhi gf  
 lbZfa Ujcb" H Ya UbU Ya Ybhi gf Wb cb mYXY YX Vni gbl Ug Wj WXYcf'a Yh cXXYg| bUNX  
 Zcf'a UbU Ya Ybhi gf XY Yjcb"

&"H Y8 i UI gf 5i h Yb h Wjcb'a cXYfei Jfygh YU h Yb h Wjcb'cZk c'cfX|bfni gfgVZcfYh Y  
 `cW Wb`Wi b`cWYX"< ck Y Yfzh lga cXYc Yg bch UZM h YUa |b|gfUc ffg U] ]mrc i b`cW h Y  
 `cW Xf Ym m`hlg|a dcfU h c bch h Uih Y8 i UI gf 5i h Yb h Wjcb'a cXYk ]`bch WYU h Yk \Yb  
 h Y`cW |g|b`h Y|b|h U gUY'

' ""8 i f|b| h Yf|U'a cXZ h Y`cW Wb`Wcd Yb Yxi gbl h YXZU h WXY`%& () \*` Z`ck YX Vm h Y" . ""  
 \_Ym

("K \Yb h Yj c h Y Xcdg VYck `(" J zh Y`cW k ]`U h ca Uj W m h | [ Yf Ub Ufa YU W h a Y] hlg  
 UW g X" 5 Z h Y U Ufa zh Y`cW Wb`g ]`Wi b`cW YX Zcf &SS'a cfY h a Yg`C b W h Y`a ] hlg fY U W YZ  
 YU W g Vgei Yb`cW cd Y|b| k ]`VXY U m X Vm &g Y W b Xg"

) ": cf`cd h a U`d fZfa Ub WZ hlg fY W a a Yb X Y l c \_ Yd h Y`cW |b`W g Y d fcl |a ] mrc h YK ]|: ]  
 fci h m"

### 3.3. Setup code

1. How to set Passage Mode(the lock always on "unlock" condition, no need verification.After input password and the keypad light on, pls touch "0" for 3 seconds, then Passage Mode come into effect.
2. How to set Auto Lock(can be setted by 5S, 10S, 15S, 20S)  
 After unlock and the keypad light on, pls touch "1" for 3 seconds, then Auto Lock by 5S come into effect.  
 After unlock and the keypad light on, pls touch "2" for 3 seconds, then Auto Lock by 10S come into effect.  
 After unlock and the keypad light on, pls touch "3" for 3 seconds, then Auto Lock by 15S come into effect.  
 After unlock and the keypad light on, pls touch "4" for 3 seconds, then Auto Lock by 20S come into effect.  
 But if you NOT want Passage Mode, then pls set Auto Lock like above steps.


## 4. App operation

### 4.1.Download



You can search for [ Honorlink ] in various app stores or scan the QR code above to download  
web site: [www.thehonorlink.com](http://www.thehonorlink.com)

### 4.2.Register

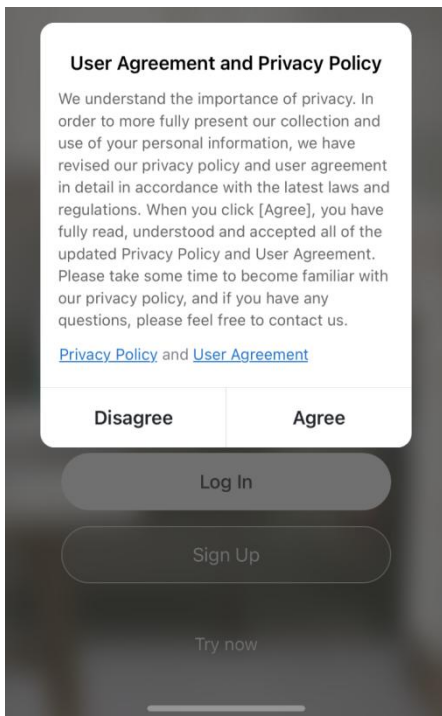

1.Click “Sign Up”and read the Privacy Policy after it pops up. Click “Agree” and enter the registration page.

2.You can use email or mobile number as your account to register. The country/region of the APP will be the same as the phone's. You can also change it by yourself when registering. (You cannot change the country/region after the registration). Enter mobile number/email and click“Get Verification Code”;

3.Enter the verification code and turn to the password setting page. Set your password as required and click “Done”.

### 4.3.Log in

If you already have an account,choose “Register with Existing Account”and enter the log in page.

1) .The system will automatically locate the current country/region you are in. Or you can choose the country/region by yourself.

2) .Enter mobile number/ email and password.

-Thirty-party Social Account Log in

If you have downloaded Wechat on your phone, you can click the Wechat icon in the log in page. You can log in using your wechat account after authorizing it.If you are using iPhone,you can also log in with Apple ID.




## 4.4.Using the APP

### 4.4.1. Add Lock


1. Tap Add Device on the Home page or + in the upper right corner of the page to go to the Add Device page. Currently, you can manually add devices or search for devices to add to the app.

**Attention: You should be add admin first!!!**

- ① :After pressing “2” + “#” to verify the administrator, enter the Network config ,  
The numbers starts flashing
- ② As shown in the figure, the mobile app connects the lock. Select the wifi door lock, enter the wifi password and connect the door lock(it can only connect to 2.4G WiFi)
- ③ Adding success: the voice prompt “successful”
- ④ Adding Failure: The keyboard light No. 5 on the keyboard is not lit, and the timeout voice prompt “failed”

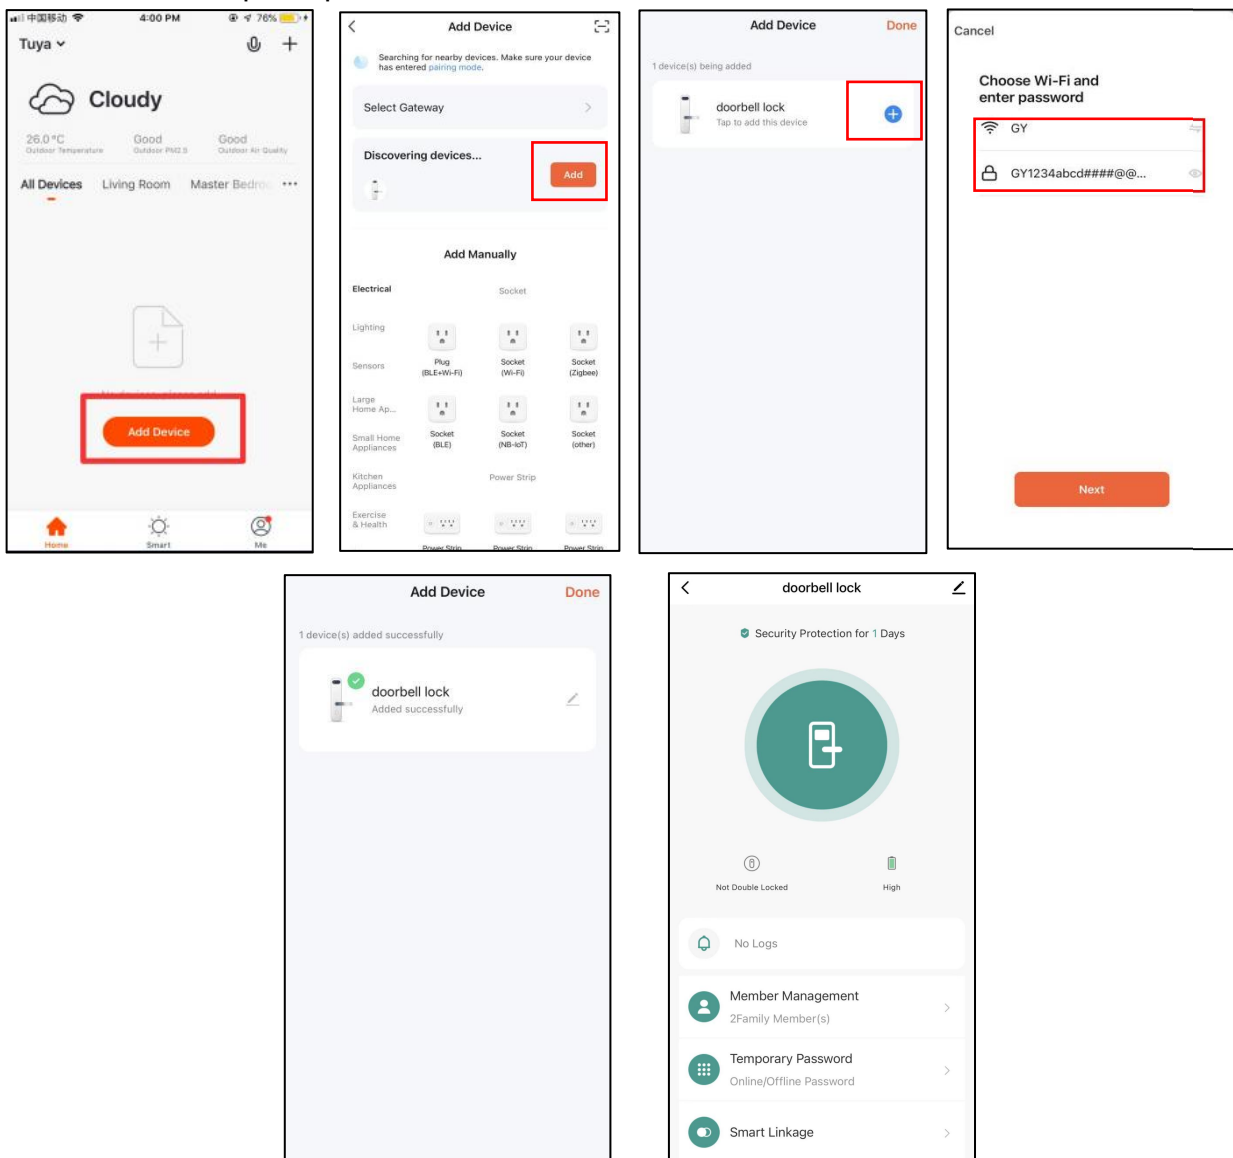


## 4.4.2. Remote unlock

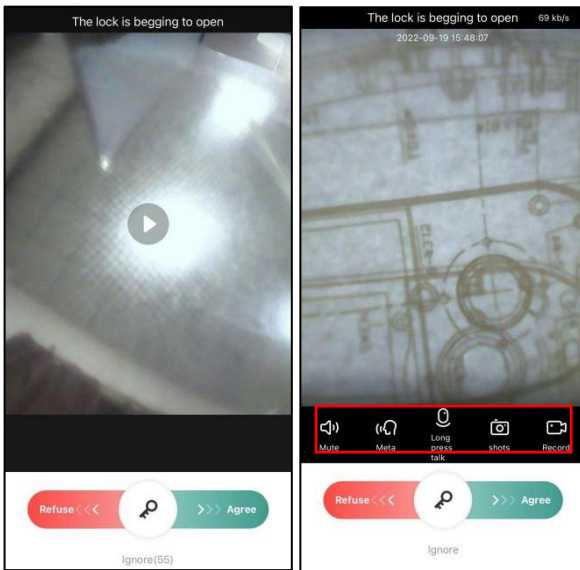


1. Tap on the homepage of the mobile app to access the corresponding page for the smart lock.
2. Press the "#" key on the smart lock keypad to request remote unlock.
3. The mobile app will receive the unlock request, and swipe to unlock.
4. If a video request is received, you can choose to view the real-time video by tapping the play button or simply swipe to unlock.
5. Real-time video intercom is available, and features like Mute, Zoom, Capture, and Record can be utilized during the video call.
6. Enjoy 30 free video calls per month.
7. Video calls will automatically disconnect after one minute.

## 4.4.3. Online Password Function

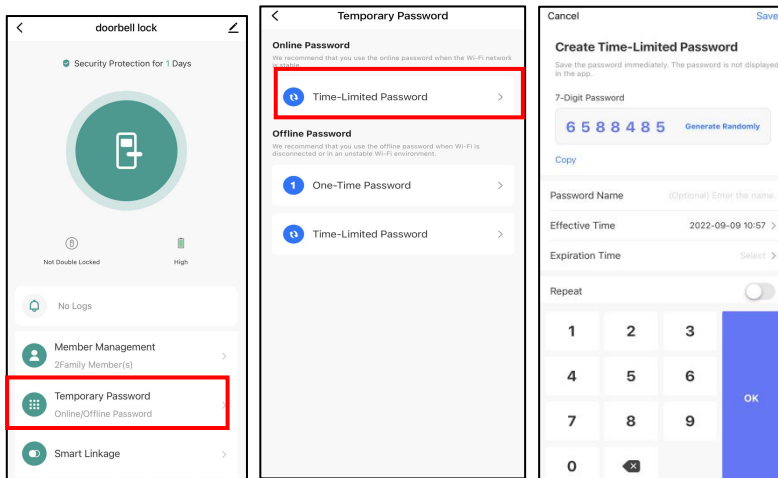

When a visitor arrives at your office or home, you have the option to generate a temporary password with a specified validity period. Follow the steps below to perform this operation. Additionally, you can view the unlock records in the mobile app window.


## 4.4.4. Offline Password Function

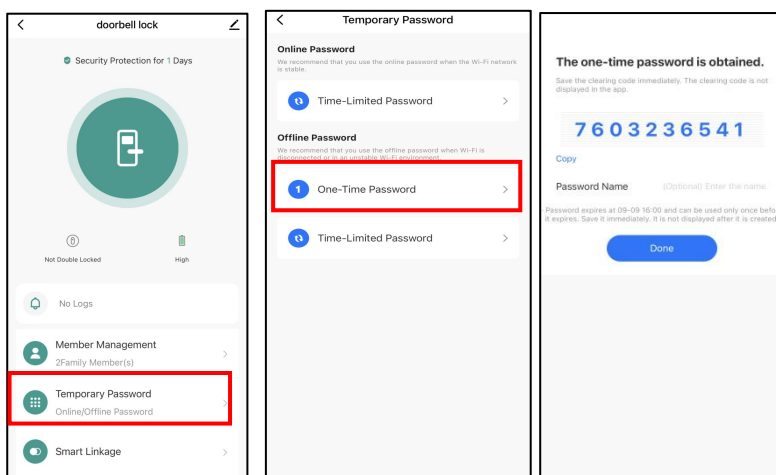

There are two types of offline passwords available: one-time password and time-limited password.

A one-time password will only remain valid for 6 hours, and a time-limited password will remain valid for 24 hours.


## 4.4.5.Alarm

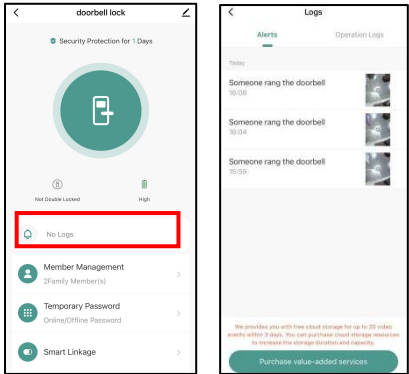

The image shows two side-by-side screenshots from a mobile application. The left screenshot is titled 'doorbell lock' and shows a 'Security Protection for 1 Days' status. Below this, there is a 'No Logs' button highlighted with a red box. The right screenshot is titled 'Logs' and shows a list of 'Alerts' with the text 'Someone rang the doorbell' and a small video thumbnail for each entry. A red box highlights the 'Operation Logs' tab at the top of the 'Logs' screen.

1. Automatically generate reports when an alarm is triggered. These reports can include the following types: doorbell call, tamper-proof alarm, low-voltage alarm, and validation error alert.
2. When the doorbell is triggered, you have the option to view a brief video associated with the event.

## 4.4.6.Record

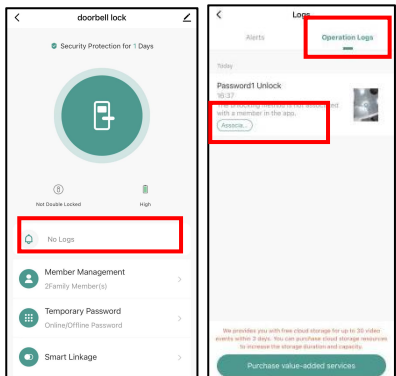

The image shows two side-by-side screenshots from a mobile application. The left screenshot is titled 'doorbell lock' and shows a 'Security Protection for 1 Days' status. Below this, there is a 'No Logs' button highlighted with a red box. The right screenshot is titled 'Logs' and shows a list of 'Alerts' with the text 'Password Unlock' and a small video thumbnail. A red box highlights the 'Operation Logs' tab at the top of the 'Logs' screen, and another red box highlights the 'Associate' button below the 'Password Unlock' entry.

Upon opening the door, an opening record will be generated and reported. If the opening method has not been previously linked or associated with a user, you can simply click to bind the user to the opening method.

1. To edit the opening information of a user, simply click on the user's profile that has been added. From there, you can make changes to the corresponding user's opening details.
2. The lock and the mobile app are synchronized through cloud information. To bind the lock opening information to a user's name, select the lock opening information that has already been synchronized to the cloud and associate it with the user. This way, when the user opens the lock, the app's opening record will display the lock opening event associated with that user. However, please note that if the user's information is deleted within the app, the user will still be able to open the door. To prevent access, the user's information must be deleted directly from the lock itself.

## 5.FAQ

|   |  |
|---|--|
| 1) How to read operation records?   | In the Records of the main interface. .  |
| 2) Why can't I unlock it after open the passage mode  | You need to perform an unlock verification in any method, than the passage mode will take effect.  |
| 3) What is the purpose of Auto Lock   | You can set how long to lock after unlocking   |
| 4) After installation, touch sensing keyboard, screen no respond  | <p>a) In this case, first check that the positive and negative electrodes of the battery have been installed upside down, whether the battery has enough power</p> <p>b) Remove the back panel and see if it's connected.</p> <p>c) To eliminate the above situation, you need to remove the lock ,check whether the wires of the lock body are squeezed, and the re-wire.</p> |
| 5) Unable to register fingerprint   | <p>Check the fingers for dirt or wear, check the fingerprint head on the lock for dirt and oil stains, etc.</p> <p>Check to see if the fingerprint is working properly(Press to see if there is any responds.</p>  |
| 6) What is the reason why the smart lock consumes fast power?   | <p>a) Large standby power consumption</p> <p>b) Short circuit</p>  |
| 7) There is no response to pressing the handle on outside the door, and there is unlock normally on inside the door, but the verification is normal, and the motor is normal. | It may be the triangle direction on the clutch was error, please check correction.   |
| 8) How many times will the password be locked? How long is it locked?   | Enter the wrong password more than 5 times in a row, the keyboard is locked for 90 seconds   |

# Guarantee

Customer Name: \_\_\_\_\_

Customer Calls : \_\_\_\_\_

Purchase Date : \_\_\_\_\_

Product Name : \_\_\_\_\_

Product Model : \_\_\_\_\_

## Note:

- ① Please keep this card so that you can use it when you need warranty service.
- ② We provide you with a one-year warranty from the date of purchase.
- ③ This warranty service is valid for customers in any country in the world.