


Smart Lock

User Manual

HL-SDL02

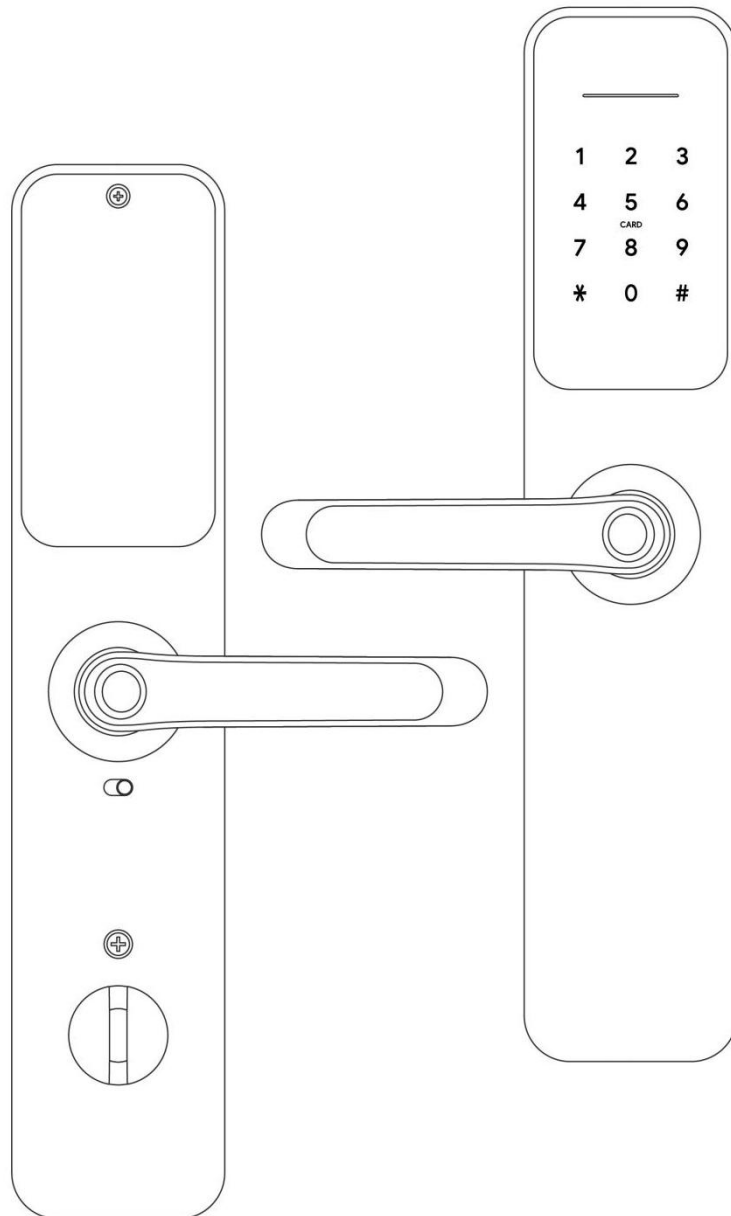


Special Attention:

1. Mechanical keys please keep outdoor, just in case keys lock in doors.
2. Please replace for the battery when low wattage alarm.
3. Reading this manual carefully before installation, and keep it for future reference.

1. Introduction

1.1.Lock structure

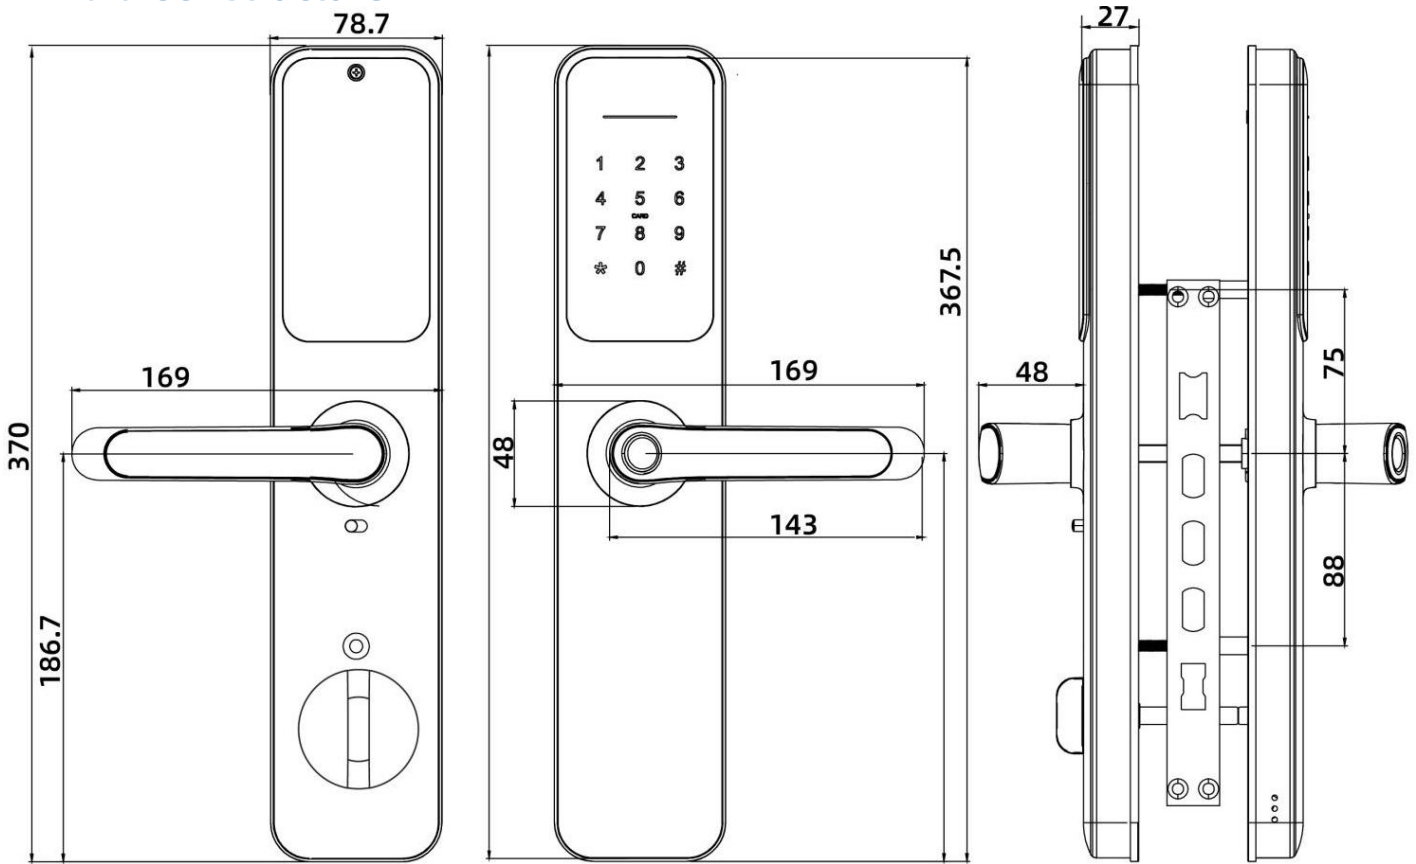

1.2.Packing List

Check the following drawing to check whether the package contains all the parts

NO	Name	Qty	NO.	Name	Qty
1	Front Panel	1	10	Mortise Screws:M5*10mm (For Aluminum Door)	4
2	Back Panel	1	11	Mortise Screws:M4*20mm (For Wooden Door)	5
3	Mortise	1	12	60mm Square shaft	1
4	Card	3	13	80mm Square shaft	1
5	Mechanical Key	2	14	M5*40mm Screw	1
6	Waterproof Rubber Plate	2	15	M5*50mm Screw	1
7	Screw Stubs:M5*30mm	2	16	M5*60mm Screw	1
8	Screw Stubs:M5*35mm	2	17	U-Clip	1
9	Strike&Strike Box	1+1	18	User Manual	1

1.3.Specifications

Suitable for Models	HL-SDL02	Doors Applicable	Aluminum door Wooden door
Materials	Panel: Stainless steel Handle: Aluminum alloy	Working Voltage	6V/4x AA Batteries
Lock Weight	3KG	Door Thickness to Fit	35-60mm
Unlocking Way	WIFI Fingerprint(option) Password Card Mechanical key	Data Capacity	Fingerprint+Password+Card ≤180 (Fingerprint≤100)
Color	Silver Black	Working Temperature	-10°C-55°C
Low Wattage Alarm	Less than 4.8V	Working Humidity	0-95%

1.5.Electronic Locking Button



Locked



Unlock

When you pull the button to "red" status, the lock was on "Locked" status. And it can be opened from outside, only by Master Admin . Other unlock ways, when you try to unlock, it will voice out " the lock was locked". To disable this function, you need pull the button to "green" status, to release the "Locked" status.


- Introduction
- Installation
- Operation
- F&Q
- Appendix

2.Installation


2.1Turn the handle

Notice: Adjust the handle according to the direction you open the door.


For Pront Panel

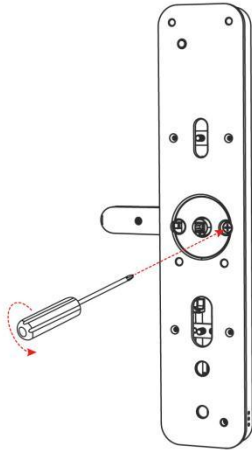

1. Loosen the screws

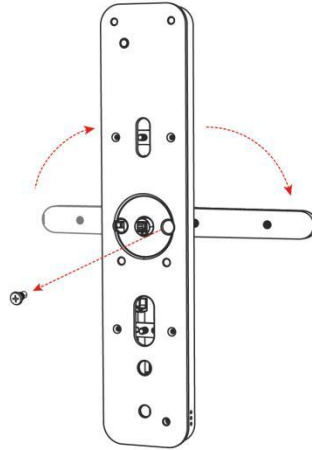


2.Left Open the Handle Toword the Left;
Right Open the Handle Toword the Right.

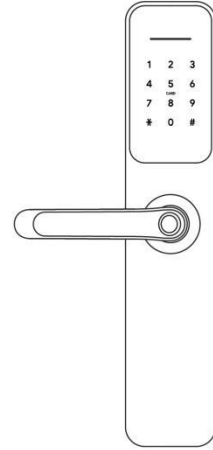


3.Reinstall the Screw After
Adjusting the DIRECTION


For Back Panel

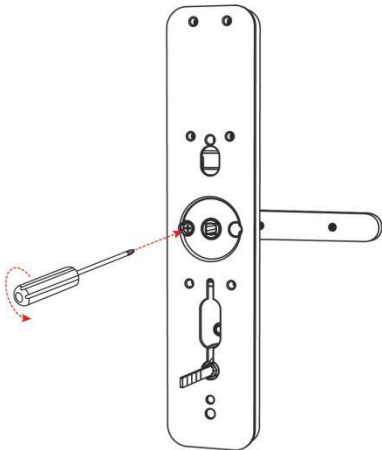

1. Loosen the screws





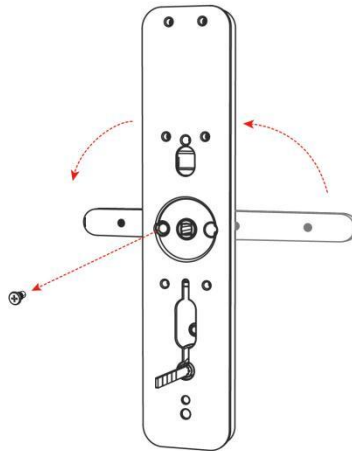


2.Left Open the Handle Toword the Right ;
Right Open the Handle Toword the Left.

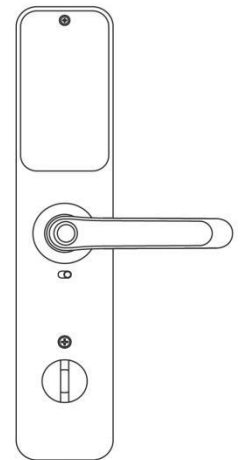

3.Reinstall the Screw After
Adjusting the DIRECTION


2.2. Installation Diagram(For 6068)
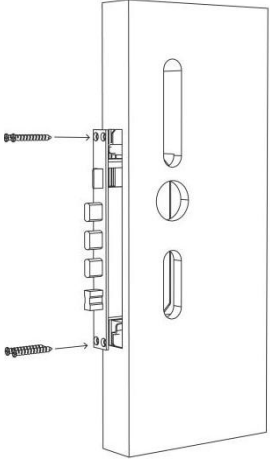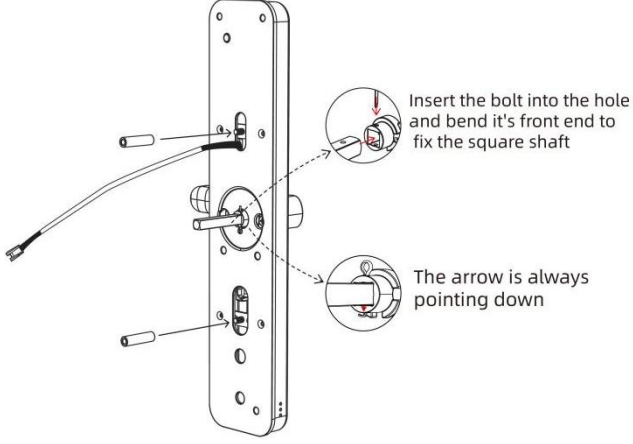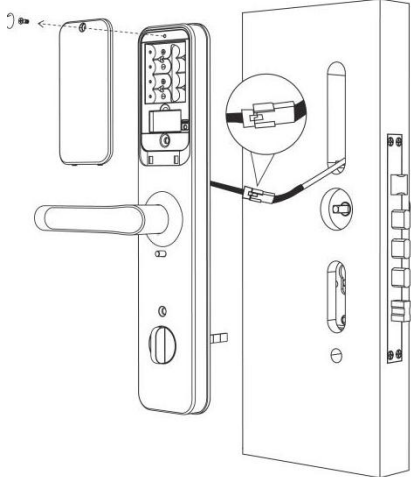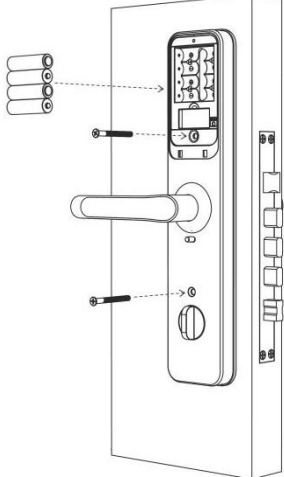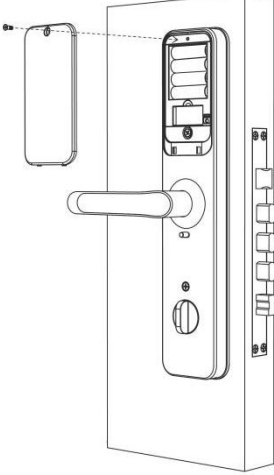
<p>Step 1 Install Mortise</p>	<p>Step 2 Install Sliding Screw Casing</p>
<p>4</p> 	 <p>Insert the bolt into the hole and bend it's front end to fix the square shaft</p> <p>The arrow is always pointing down</p>
<p>Step 3 Install Back Panel and link wire</p>	<p>Step 4 Install fixing screws</p>
	
<p>Step 5 installation complete</p>	
	

3.Operation

3.1.Number Pad


"*" : Cancel, Return,
Exit and Delete
"# " : Confirm and End

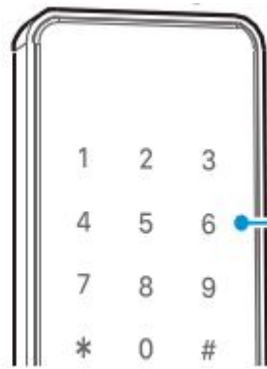


- 1#: set
- 2#:EZ mode
- 4#: Request remote unlock picking
- 5#: Get a temporary password
- 6#: Time Updating
- 8#: AP mode

Passage mode: After verifying unlocking, press and hold "0" for 3 seconds and then prompt "the door is passage mode"

3.2.1.Setting Guide

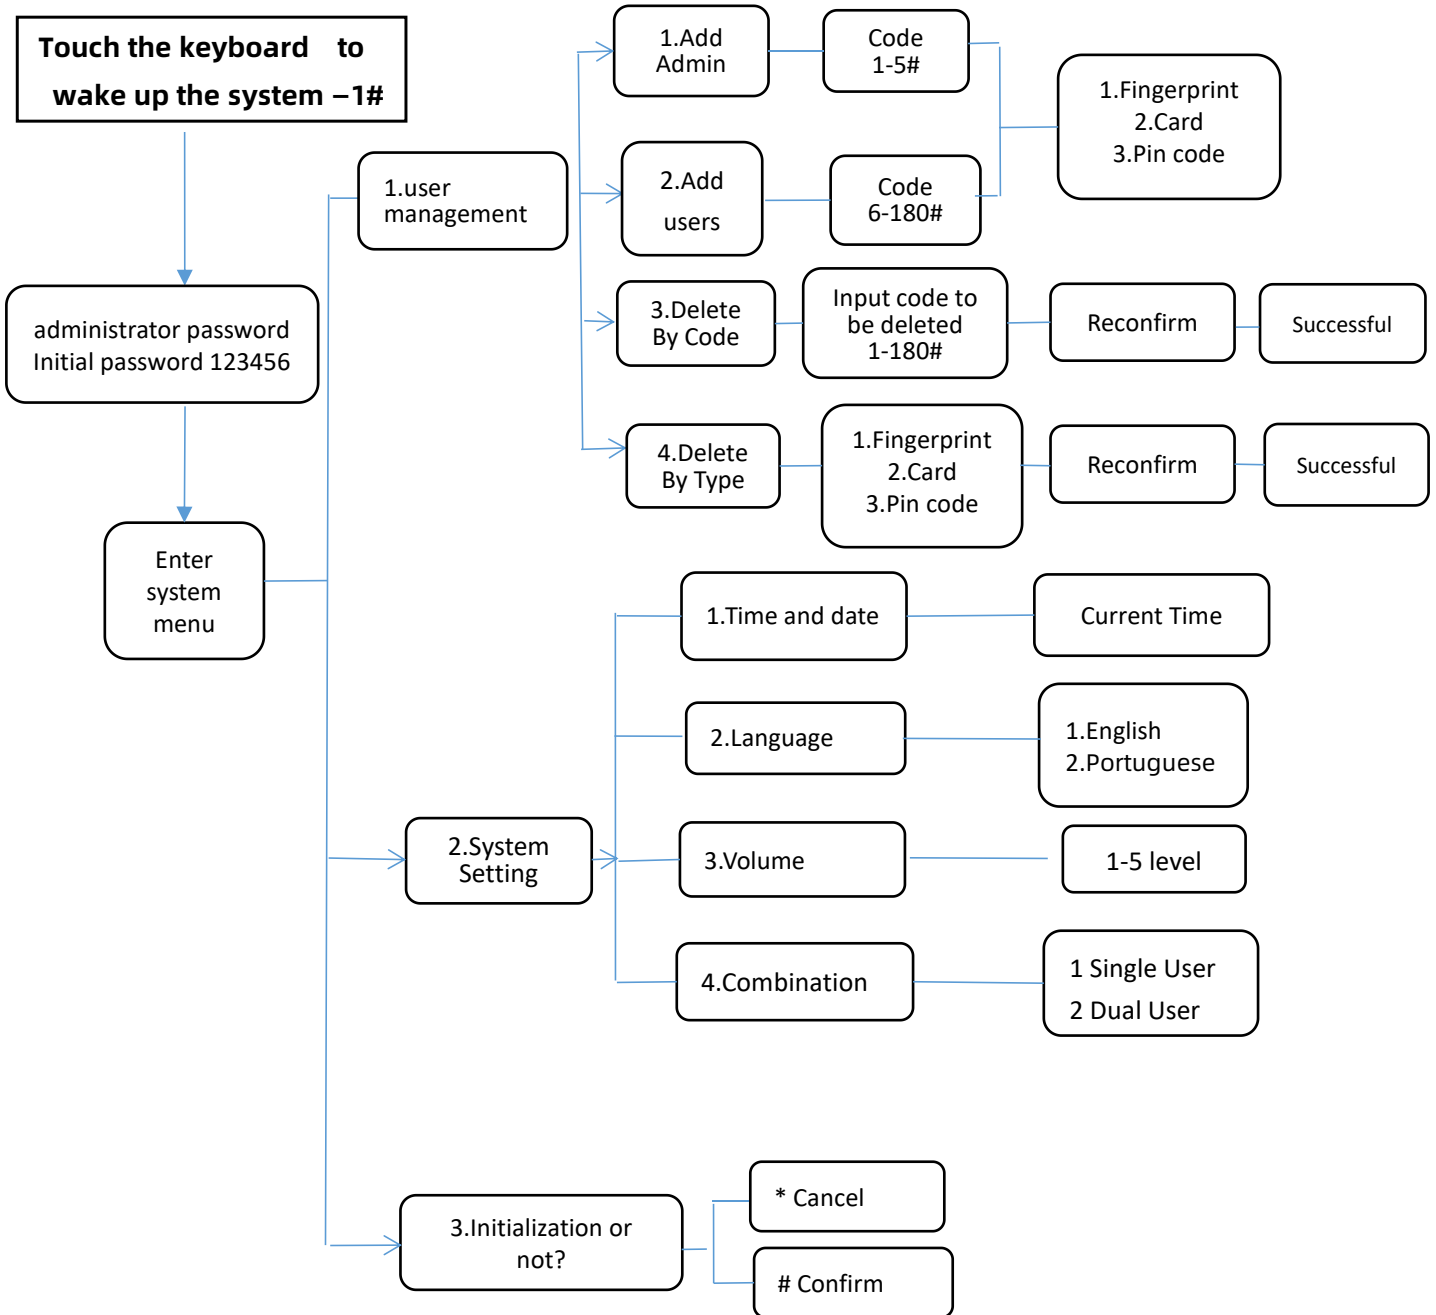

3.2.2. Initialization Mode

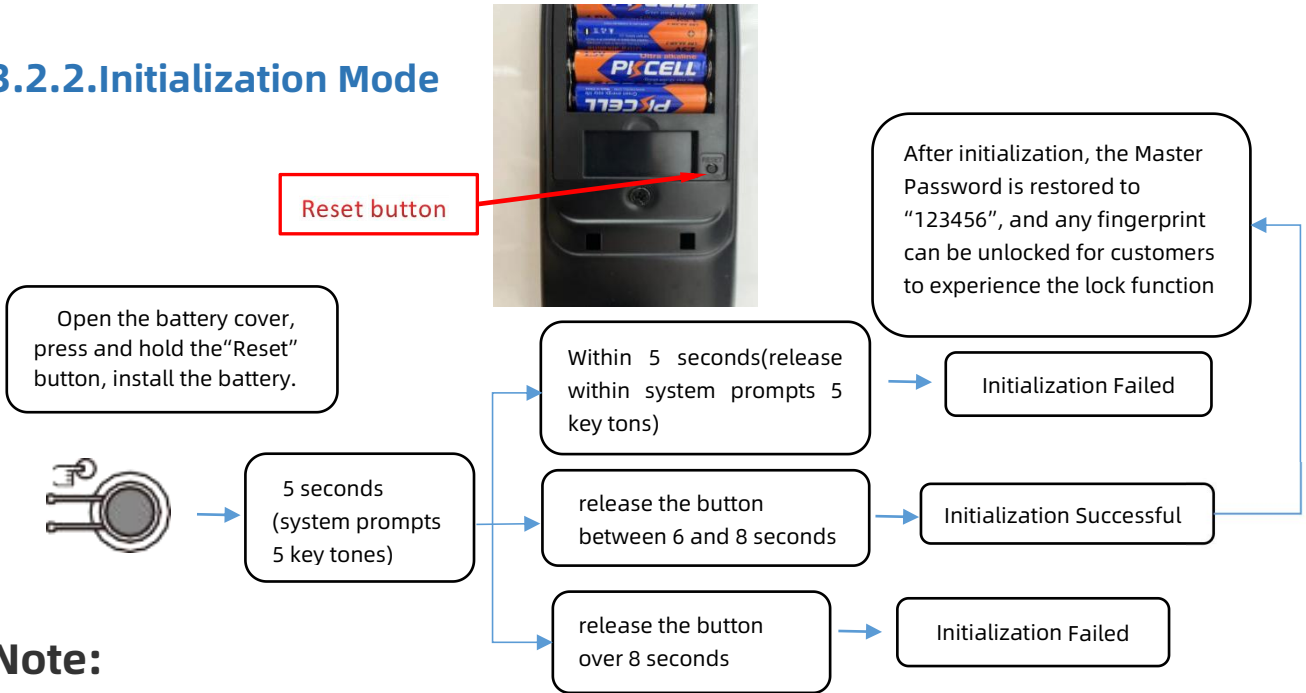

Note:

1. Delete by type cannot delete management user information, management user can only be deleted by code.

2. Dual user authentication mode requires authentication of two ordinary users. The administrator is not affected by this and can directly unlock the lock. The dual user authentication will not be effective when in initial state.

3. The lock can be opened using default code 123456 followed by # in trial mode

4. When the voltage is lower than 4.8V, the lock will automatically alarm every time. After the alarm, the lock can be unlocked for 200 times. After the number of times, the delay time of each lock opening will be 2 seconds.

5. Keep the lock as close as possible to the wifi router

3.3. Setup code

1. How to set Passage Mode (the lock always on "unlock" condition, no need verification. After input password and the keypad light on, pls touch "0" for 3 seconds, then Passage Mode come into effect.

2. How to set Auto Lock (can be setted by 5S, 10S, 15S, 20S)

After unlock and the keypad light on, pls touch "1" for 3 seconds, then Auto Lock by 5S come into effect.

After unlock and the keypad light on, pls touch "2" for 3 seconds, then Auto Lock by 10S come into effect.

After unlock and the keypad light on, pls touch "3" for 3 seconds, then Auto Lock by 15S come into effect.

After unlock and the keypad light on, pls touch "4" for 3 seconds, then Auto Lock by 20S come into effect.

But if you NOT want Passage Mode, then pls set Auto Lock like above steps.


4. App operation

4.1.Download



You can search for [Honorlink] in various app stores or scan the QR code above to download

4.2.Register

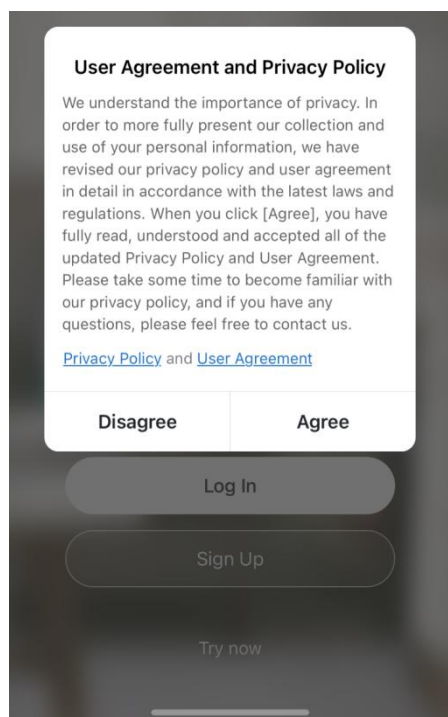

1.Click “Sign Up”and read the Privacy Policy after it pops up. Click “Agree” and enter the registration page.

2.You can use email or mobile number as your account to register. The country/region of the APP will be the same as the phone's. You can also change it by yourself when registering. (You cannot change the country/region after the registration). Enter mobile number/email and click”Get Verification Code”;

3.Enter the verification code and turn to the password setting page. Set your password as required and click “Done”.

4.3.Log in

If you already have an account,choose “Register with Existing Account”and enter the log in page.

1) .The system will automatically locate the current country/region you are in. Or you can choose the country/region by yourself.

2) .Enter mobile number/ email and password.

-Thirty-party Social Account Log in

If you have downloaded Wechat on your phone, you can click the Wechat icon in the log in page. You can log in using your wechat account after authorizing it.If you are using iPhone,you can also log in with Apple ID.

4.4.Using the APP


4.4.1. Add Lock

1. Tap Add Device on the Home page or + in the upper right corner of the page to go to the Add Device page. Currently, you can manually add devices or search for devices to add to the app.


Attention: You should be add admin first!!!

1) AP Mode Method:

- ①:After pressing “8” + “#” to verify the administrator, enter the Network config , The “5” starts flashing
- ②:Select the wifi door lock, enter the wifi password and connect the door lock
- ③ :connect the device to a Wi-Fi hotspot whose name starts with SmartLife-XXX.Return to the app and automatically jump to the connection
- ④:Adding success: the voice prompt “successful”
- ⑤:Adding Failure: The keyboard light No. 5 on the keyboard is not lit, and the timeout voice prompt “failed”

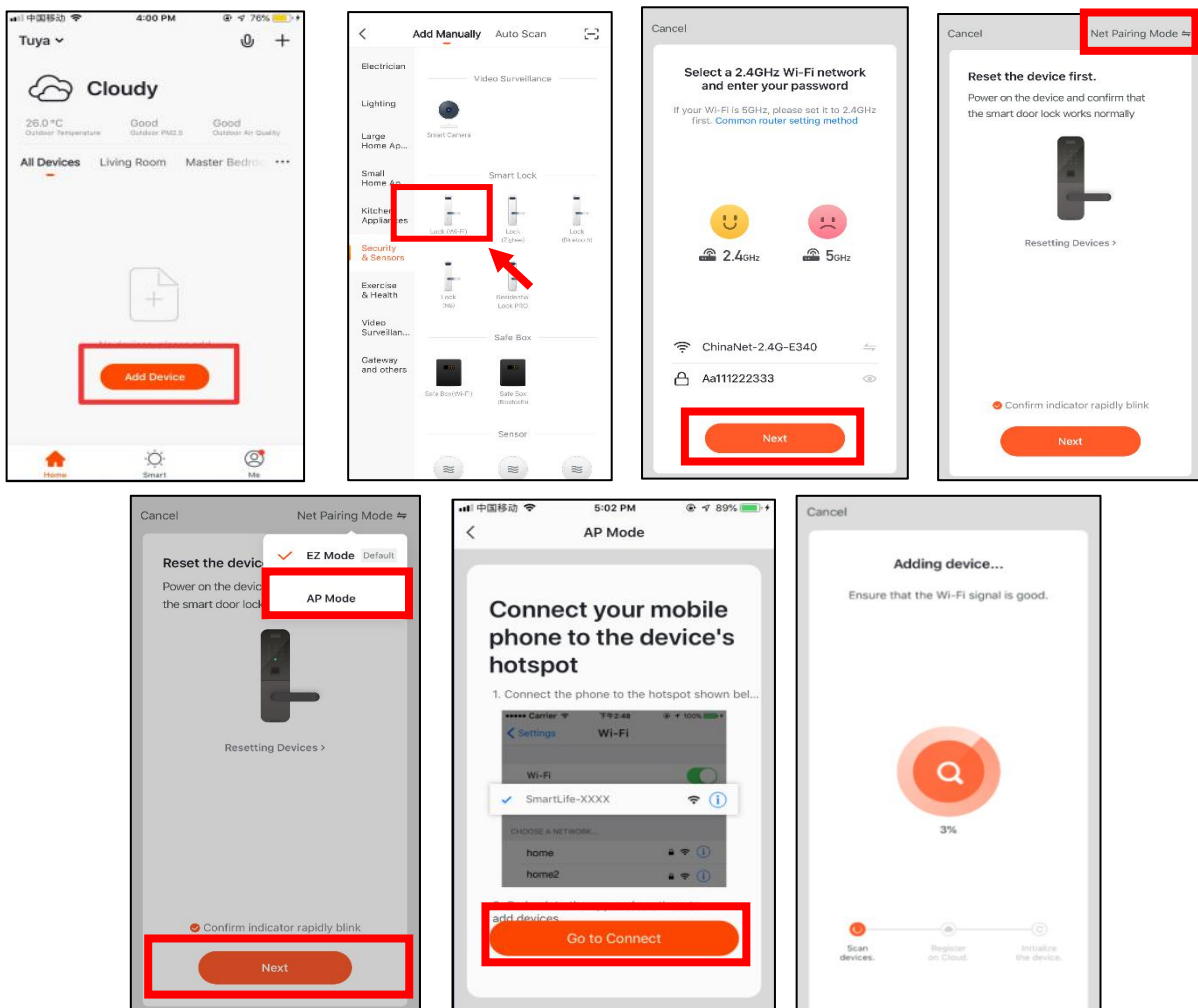

2) EZ Mode Method:

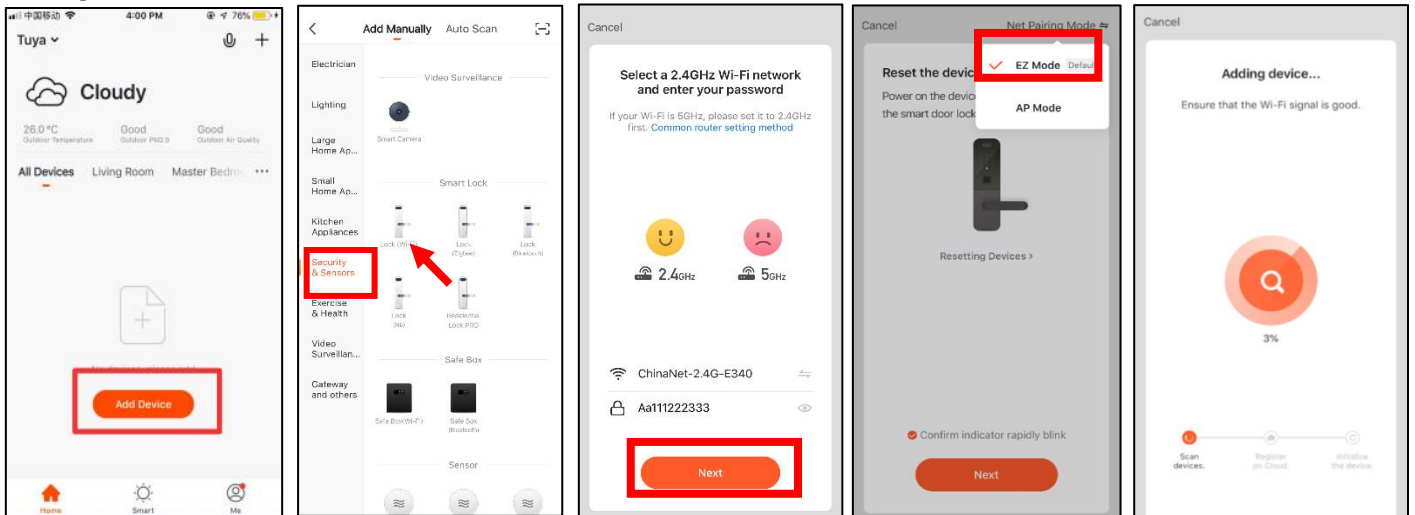


- ① After pressing “2” + “#” to verify the administrator, enter the Network config , The “5” starts flashing
- ② As shown in the figure, the mobile app connects the lock. Select the wifi door lock, enter the wifi password and connect the door lock
- ③ Adding success: the voice prompt “successful”
- ④ Adding Failure: The keyboard light No. 5 on the keyboard is not lit, and the timeout voice prompt “failed”

4.4.2. Remote unlock 、 temporary password 、 Remote dynamic password

a) Temporary Password

1. Click on the APP homepage to enter the corresponding door lock page
2. Generate a temporary password on your app
3. Press “5”+“#” on the door lock , You can open the door with the temporary password after success

b) Remote unlock

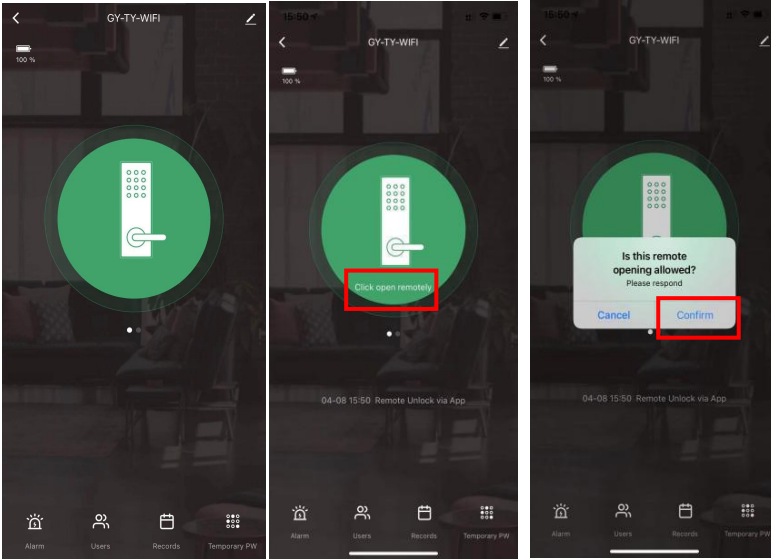


1. Click on the APP homepage to enter the corresponding door lock page

2. Door lock keyboard press "4"+"#" Request remote unlock picking

3. The mobile APP will receive the application information, and click "Ok" to open the lock

c) Remote dynamic password


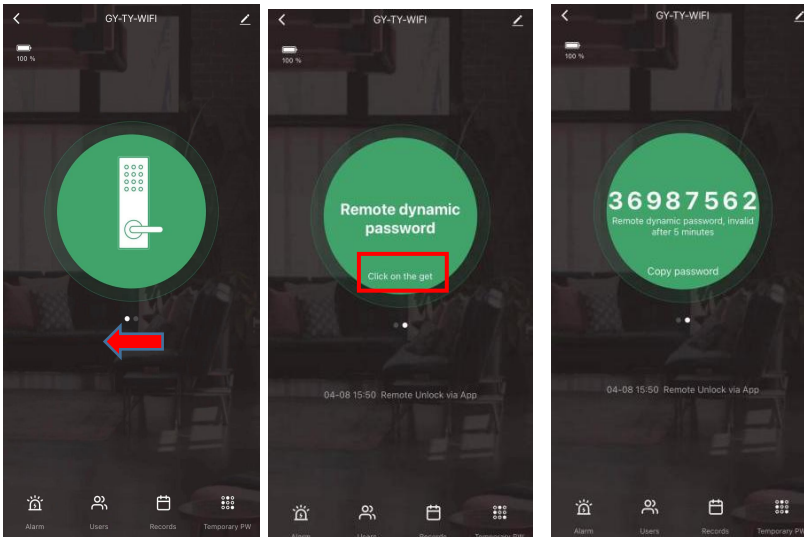


1. Swipe the screen to the right and click get dynamic password

2. The password is valid for five minutes and needs to be retrieved after five minutes


3. If the password cannot be unlocked, the lock time may be wrong, press 6# on the lock to update the lock time, and then re-enter

4.4.3. Alarm

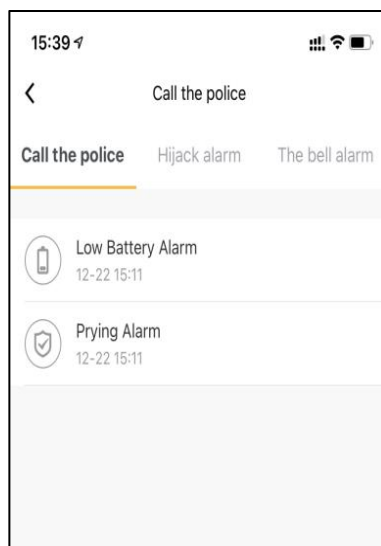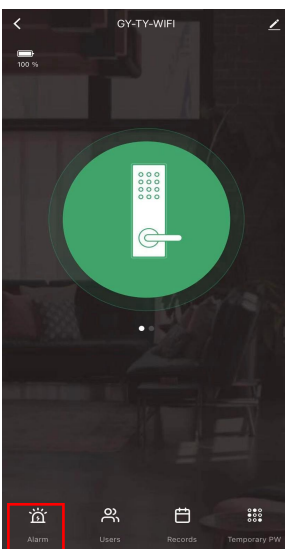

Automatically report after an alarm occurs. The report types include: doorbell call, tamper-proof alarm, low-voltage alarm, normally open alarm, and freeze when the number of verification errors exceeds

4.4.4. User Management

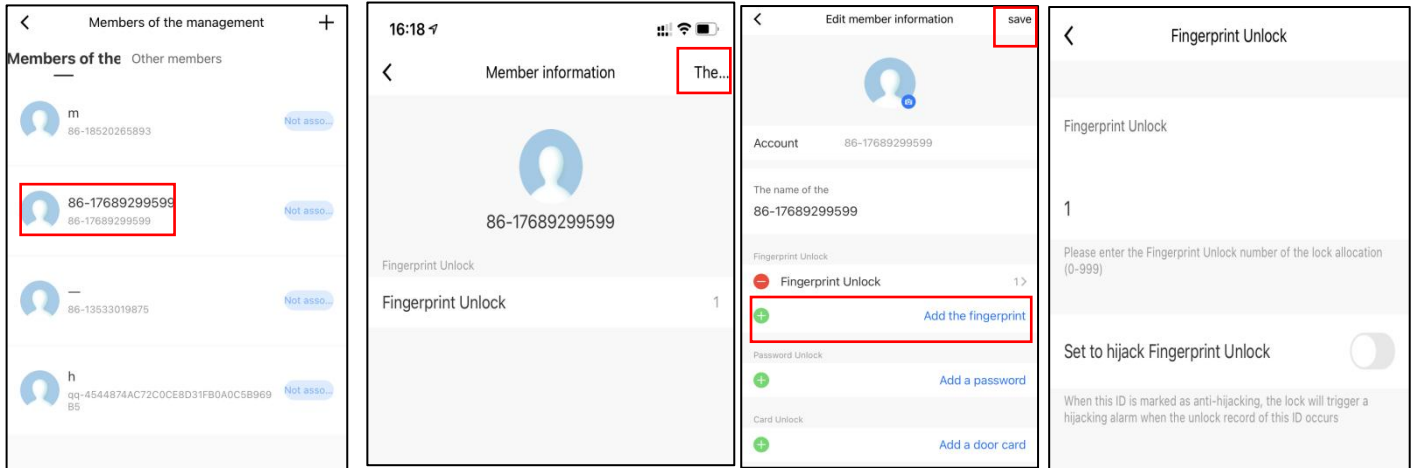

1. Click on the added user, you can edit the corresponding user opening information of a user

2. The lock and the app are synchronized through cloud information: enter the number of the door opening method on the lock. For example, Peter sets a password number 001 on the lock, then enter 1 in the app as shown in Figure 4, and use this number 001 later Password to open the door, the door opening record in the app will show that the door opened by Peter, But if the user information is deleted on the APP, the user can still open the door, and it must be deleted on the lock to be effective

5.FAQ

1) How to read operation records?	In the Records of the main interface. .
2) Why can't I unlock it after open the passage mode	You need to perform an unlock verification in any method, than the passage mode will take effect.
3) What is the purpose of Auto Lock	You can set how long to lock after unlocking
4) After installation, touch sensing keyboard, screen no respond	<p>a) In this case, first check that the positive and negative electrodes of the battery have been installed upside down, whether the battery has enough power</p> <p>b) Remove the back panel and see if it's connected.</p> <p>c) To eliminate the above situation, you need to remove the lock ,check whether the wires of the lock body are squeezed, and the re-wire.</p>
5) Unable to register fingerprint	<p>Check the fingers for dirt or wear, check the fingerprint head on the lock for dirt and oil stains, etc.</p> <p>Check to see if the fingerprint is working properly(Press to see if there is any responds.</p>
6) What is the reason why the smart lock consumes fast power?	<p>a) Large standby power consumption</p> <p>b) Short circuit</p>
7) There is no response to pressing the handle on outside the door, and there is unlock normally on inside the door, but the verification is normal, and the motor is normal.	It may be the triangle direction on the clutch was error, please check correction.
8) How many times will the password be locked? How long is it locked?	Enter the wrong password more than 5 times in a row, the keyboard is locked for 90 seconds

Guarantee

Customer Name: _____

Customer Calls : _____

Purchase Date : _____

Product Name : _____

Product Model : _____

Note:

- ① Please keep this card so that you can use it when you need warranty service.
- ② We provide you with a one-year warranty from the date of purchase.
- ③ This warranty service is valid for customers in any country in the world.